Automatic Tommy 20 Battery Replacement

Replace your gun's battery so that it can continue functioning.

Written By: Reed Garmsen



INTRODUCTION

Replacing the battery in the Tommy 20 is a relatively simple replacement, just make sure you have 3 replacement AA batteries ready to go beforehand along with a Phillips #1 Screwdriver! A good first step in any repair goal concerning the Tommy 20!

TOOLS:


- Phillips #1 Screwdriver (1)

PARTS:

- AA Batteries (1)

Step 1 — Removing the Battery Cover




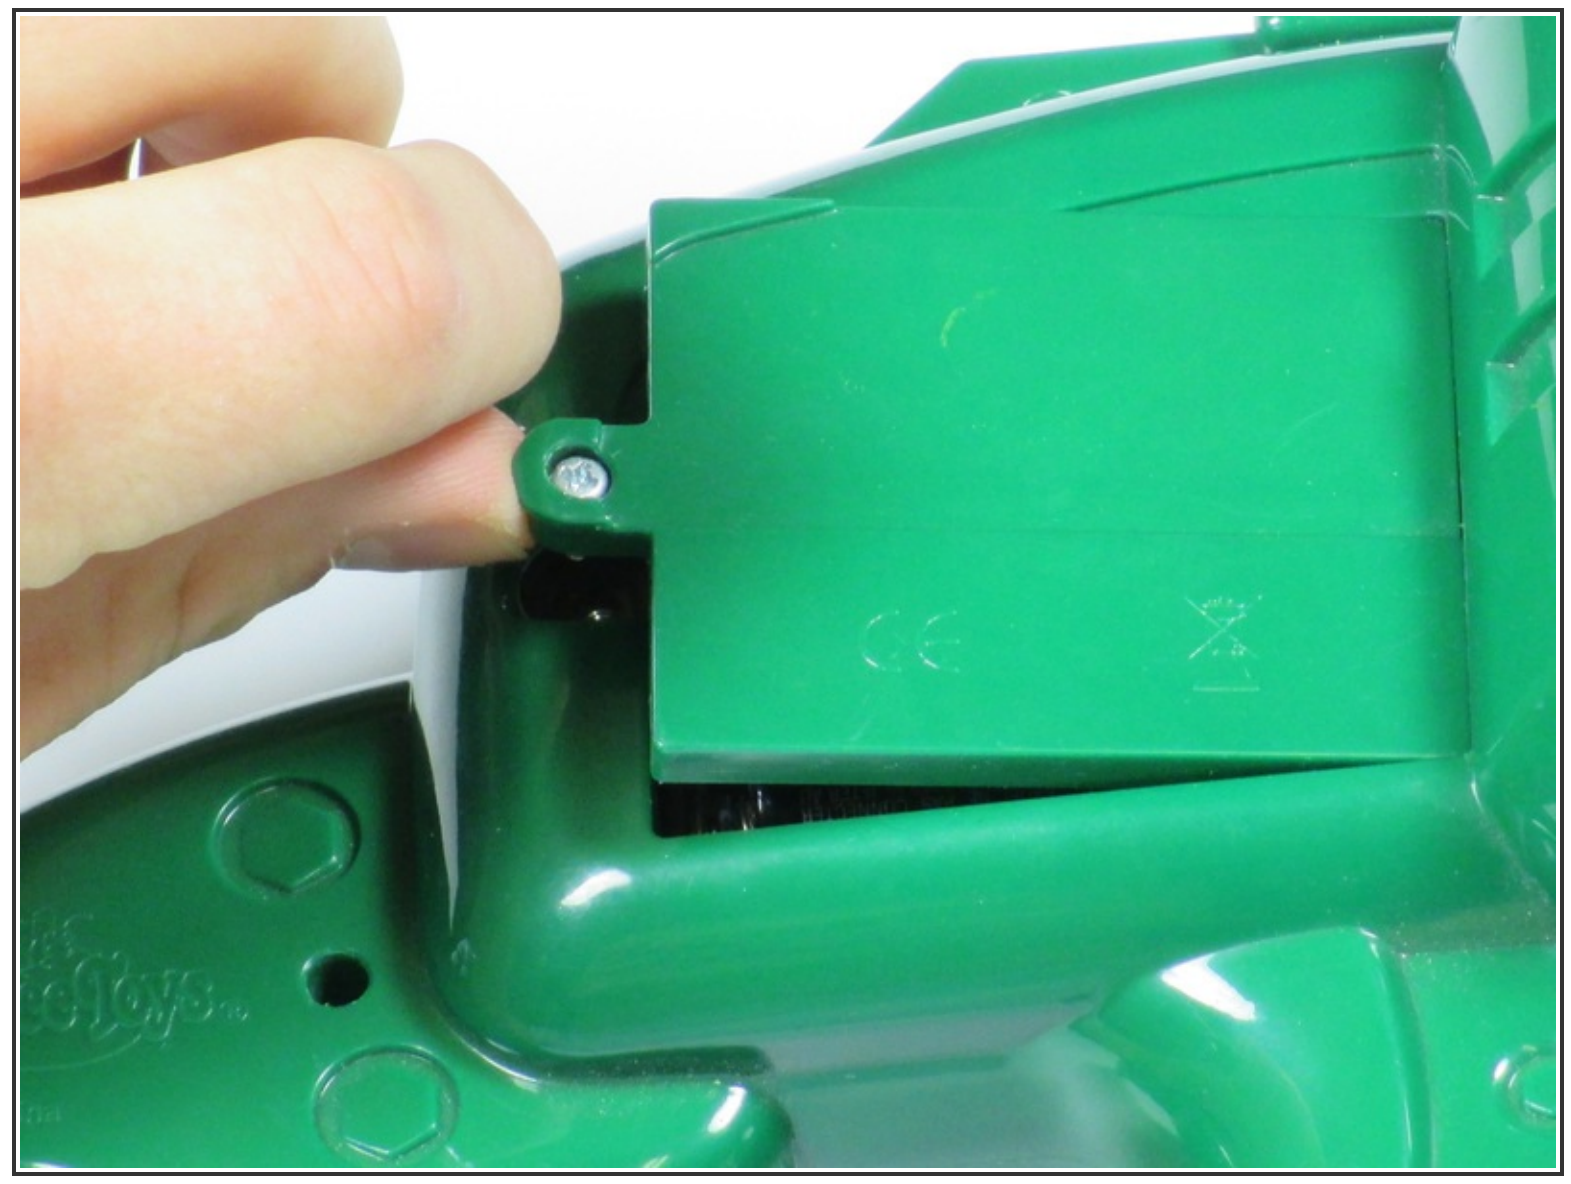

- Remove the single 1mm screw connecting the battery cover to the gun using a Phillips #1 screwdriver.
- Lift the cover away from the gun and remove.

Step 2 — Remove the Batteries



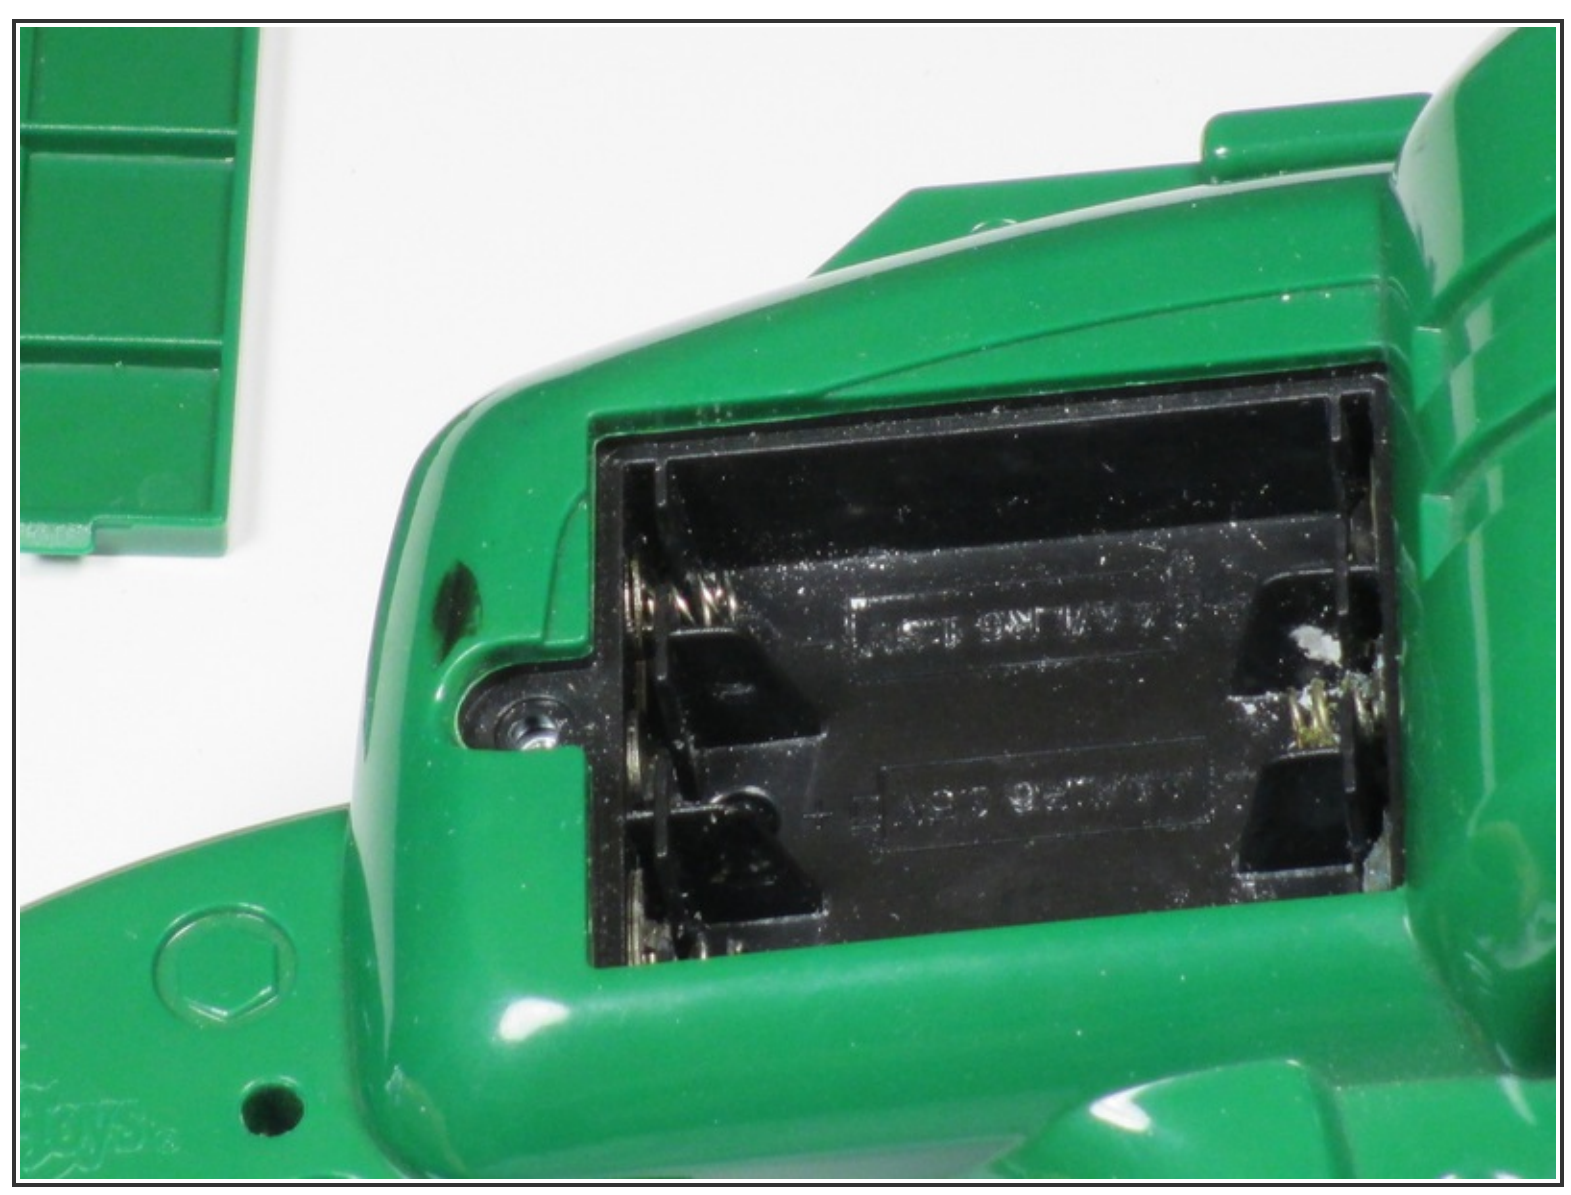

- Remove all three batteries from compartment by pulling up on the positive end of each battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:06:14 AM.